



## Navigation



### Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

### Search the Wiki

 »

### Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

### Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

### Administration

- [Administration](#)
- [File Management](#)

### Brought to you by:

The SPE Extrusion Division Board of Directors



## Check It Out

Modified on Sunday, 01 February 2015 01:02 PM by [mpieler](#) Categorized as [Extrusion Hints](#)

[\(10\)](#) » [Extrusion Hints - User Submissions](#) » [Rupture Disks](#) » **Check It Out**

Vol. 16 #2, Dec. 1989 - Check it out

- Check underwater pelletizer blades for corrosion.
- Check to make sure that your heaters are actually supplying heat when the process temperature is below the setpoint.
- Check the cooling water sump level it could be low.
- Have you changed oil and filter on your gearbox lube system lately?

See also:

- [Cooling water](#)
- [Gear pump lubrication](#)
- [Underwater pelletizer](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .