



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki


»

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration


- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



RPM Meters

Modified on Sunday, 15 February 2015 02:22 PM by rxiao Categorized as [Extrusion Hints](#) 

[\(10\)](#) » [Rupture Disks](#) » [Check It Out](#) » [RPM Meters](#)


Vol. 16 #2, Dec. 1989 - RPM Meters

Calibrate your RPM meter from time to time. It is easy. Use a stop watch and count revolutions. You will be surprised how often they are out of calibration.

See also:

- [Calibrate tachs](#)
- [Extruder drive](#)
- [Drive speed controller](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .