



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration


- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Gear Box Oil

Modified on Sunday, 01 February 2015 04:45 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 
(10) » [Screw Wear](#) » [Melt Temperature](#) » [Gear Box Oil](#)

Gear Box Oil
Vol. 17 #2, July 1990


Don't neglect gear boxes and gear reducers.

Check the oil level regularly and change periodically with recommended oil only.

See also:

- [Gear box oil level](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .