



## Navigation



### Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

### Search the Wiki

  [»](#)

### Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

### Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

### Administration

- [Administration](#)
- [File Management](#)

### Brought to you by:

The SPE Extrusion Division Board of Directors



## Check New Screws

Modified on Sunday, 01 February 2015 04:49 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

[\(10\)](#) » [Gear Box Oil](#) » [Tidal Waves](#) » [Check New Screws](#)

Check New Screws Vol. 17 #2, July 1990


When purchasing new screws, it is important to fully inspect the screw for outside diameter, channel profile, shank dimensions and overall length.

Remember, "you get what you expect only when you inspect."

See also:

- [New screw shank lubricant](#)
- [Screw design](#)
- [Screw inspection](#)
- [Screw position](#)
- [Screw performance](#)
- [Start new screws](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .