



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division Board of Directors



Extruder Throat Cooling

Modified on Sunday, 01 February 2015 04:58 PM by [mpieler](#) Categorized as [Extrusion Hints](#) (10) » [Accurate Melt Temperature](#) » [Output Variation 2](#) » **Extruder Throat Cooling**

Extruder Throat Cooling
Vol. 17 #3, Dec. 1990

When encountering "feeding problems" (rate instability. etc.), check to be sure water is flowing through the throat. They do clog up, especially in areas of poor water quality and it is easily overlooked.

See also:

- [Extruder cooling](#)
- [Feed throat configuration](#)
- [Feed throat cooling](#)
- [Feed throats](#)
- [Feed throat temperature](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#)