



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Calibrate Transducers

Modified on Sunday, 01 February 2015 05:03 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

[\(10\)](#) » [Melt Pressure](#) » [Screw Performance](#) » **Calibrate Transducers**


Calibrate Transducers
Vol. 17 #3, Dec. 1990

Pressure readings from pressure transducers should be checked with a dead weight tester. Care must be taken not to damage the pressure foot during testing.

See also:

- [Pressure transducer handling](#)
- [Pressure transducers](#)
- [Pressure transducers 2](#)

[Return to Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .