



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division Board of Directors



# Vents 1

Modified on Sunday, 01 February 2015 05:09 PM by [mpieler](#) Categorized as [Extrusion Hints](#) (10) » [Screw Specifications](#) » [Strand Cooling: Good Housekeeping](#) » **Vents 1**

Vents 1  
Vol. 17 #4, Mar. 1991

Check that the dome is clear. Is the dome heated? For some conditions, condensation can cause contamination. Is the vacuum operating acceptably?

See also:

- [How to stop a vacuum pump](#)
- [Vent design](#)
- [Vent openings](#)
- [Vents 2](#)

[Return to Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#)