



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

 »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division Board of Directors



Drive Train

Modified on Sunday, 01 February 2015 05:13 PM by [mpieler](#) Categorized as [Extrusion Hints](#) (10) » [Strand Cooling: Good Housekeeping](#) » [Vents 1](#) » **Drive Train**



Drive Train
Vol. 17 #4, Mar. 1991

Have you checked/changed the gearbox oil lately?

Have the filters been changed?

Is the cooling tower water properly lined up and turned on?

Check the alarms to be sure they are functional, it is easier than rebuilding a gearbox.

See also:

- [Cooling water](#)
- [Decreased motor amps](#)
- [Gear box oil](#)
- [Gearbox oil level](#)
- [Plant layout](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#)