



## Navigation



### Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

### Search the Wiki

 »

### Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

### Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

### Administration

- [Administration](#)
- [File Management](#)

### Brought to you by:

The SPE Extrusion Division Board of Directors



# Barrel Heaters

Modified on Sunday, 01 February 2015 05:15 PM by [mpieler](#) Categorized as [Extrusion Hints](#)

[\(10\)](#) » [Barrel Zone Override](#) » [Not Dry Enough](#) » [Barrel Heaters](#)

Barrel Heaters  
Vol. 18 #2, July 1991

Whenever possible, remove all corrosion from barrel O.D. before installing/replacing heaters to improve heat transfer.

See also:

- [Barrel zone override](#)
- [Heat transfer](#)
- [Loose heaters](#)

[Return to Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#)