



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

 »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division Board of Directors



Throughput Check

Modified on Sunday, 01 February 2015 05:16 PM by [mpieler](#) Categorized as [Extrusion Hints](#)

[\(10\)](#) » [Barrel Heaters](#) » [Patience](#) » **Throughput Check**

Throughput Check
Vol. 18 #2, July 1991

Check the throughput rate periodically. This is especially important when using volumetric feeders and to verify blend ratios.

See also:

- [High-low melt blends](#)
- [Throughput rate checks](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#)