



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration


- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Twin Screw Changes

Modified on Sunday, 01 February 2015 05:18 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 
(10) » [Static Eliminator](#) » [No Service Call](#) » [Twin Screw Changes](#)


Twin Screw Changes
Vol. 18 #2, July 1991

After changing the configuration of the screws of a twin screw machine, before reinstalling, roll them on a flat surface (together) to make sure configuration and element orientation are identical on both shafts.

See also:

- [Seed counter](#)
- [Turnaround delays](#)
- [Twin scale up](#)
- [Twin screw](#)
- [Twin screw extruder](#)
- [Twin screw extrusion](#)
- [Twin screw installation](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .