



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration


- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Screw Cleaning 1

Modified on Sunday, 01 February 2015 05:28 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 
(10) » [Razor Knives](#) » [Troubleshooting with Barrel Zones](#) » **[Screw Cleaning 1](#)**

Screw Cleaning 1
Vol. 19 #2, June 1992


Before pulling a screw to check for wear, etc., consider purging with crystal polystyrene.

When the screw cools, this material can easily be cracked and removed leaving the screw clear of residual plastic.

See also:

- [Purging](#)
- [Screw cleaning 2](#)
- [Screw wear](#)
- [Start new screw](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .