



## Navigation



## Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

## Search the Wiki

  »

## Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

## Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

## Administration


- [Administration](#)
- [File Management](#)

## Brought to you by:

The SPE Extrusion Division  
Board of Directors



# Temperature Controller Calibration

Modified on Sunday, 01 February 2015 05:39 PM by [mpieler](#) Categorized as [Extrusion Hints](#)   
(10) » [Screw Drawings](#) » [Low Viscosity Addition](#) » **Temperature Controller Calibration**

Temperature controller calibration  
Vol. 19, #2, June 1992


After controller maintenance or replacement, has your extrusion process changed? This could be due to calibration differences between controllers.

One should have a calibration program to be sure the controller reports the correct temperature and that the sensor sends the proper temperature.

See also:

- [Calibrate tachs](#)
- [Calibrate transducers](#)
- [Temperature control](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .