



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Record Root Diameter

Modified on Sunday, 01 February 2015 05:44 PM by [mpieler](#) Categorized as [Extrusion Hints](#)

(10) » [Extrusion Trials](#) » [Vent Bleed](#) » [Record Root Diameter](#)



Record root diameter
Vol.19 #3, Nov. 1992


Next time you remove a screw for cleaning, consider recording the root diameter dimensions as measured by verniers, albeit a rough estimate, it could prove useful for troubleshooting a host of processing problems.

Be sure the root is cleaned of polymer and/or degraded material.

See also:

- [Screw installation 1](#)
- [Screw removal 1](#)
- [Screw removal 2](#)
- [Screw removal 3](#)
- [Screw removal 4](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .