



## Navigation



## Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

## Search the Wiki


»

## Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

## Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

## Administration


- [Administration](#)
- [File Management](#)

## Brought to you by:

The SPE Extrusion Division  
Board of Directors



## Thermocouple Wires

Modified on Sunday, 01 February 2015 05:44 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

[\(10\)](#) » [Vent Bleed](#) » [Record Root Diameter](#) » **Thermocouple Wires**

Thermocouple Wires  
Vol.19 #3, Nov. 1992


If the thermocouple wires are too short to reach the controller, never substitute copper wire!  
Use the appropriate thermocouple extension wire.

Be sure to maintain the proper polarity. For common thermocouple types, the red wire is the negative.

See also:

- [Thermocouple connections 1](#)
- [Thermocouple connections 2](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .