



## Navigation



## Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

## Search the Wiki

  »

## Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

## Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

## Administration


- [Administration](#)
- [File Management](#)

## Brought to you by:

The SPE Extrusion Division  
Board of Directors



# Gearpump Changes

Modified on Sunday, 01 February 2015 05:49 PM by [mpieler](#) Categorized as [Extrusion Hints](#)   
(10) » [Worn Barrel](#) » [Feed Throat Configuration](#) » [Gearpump Changes](#)

Gearpump Changes  
Vol.20 #1, Mar., 1993


Monitor if gearpump motor current draw has increased and is consistent.

Variations in motor current may indicate damage to internal parts, but could also be an extrusion process problem.

See also:

- [Gear pump assembly](#)
- [Gear pump lubrication](#)
- [Gear pump wear](#)
- [Gear pumps](#)
- [Pump acceleration rate](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .