



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration


- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division Board of Directors



Vent Location

Modified on Sunday, 01 February 2015 05:57 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

[\(10\)](#) » [Die Heaters](#) » [Screw Flight Cracks](#) » [Vent Location](#)

Vent Location
Vol.20 #1, Mar., 1993


Be sure the vent location in the extruder screw is in the ideal position.

Improper location, by only a small amount, can cause performance problems such as surging, vent bleeding, etc.

See also:

- [Surging](#)
- [Vent bleed](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .