



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Drive Motor Start Up

Modified on Sunday, 01 February 2015 06:00 PM by [mpieler](#) Categorized as [Extrusion Hints](#)

(10) » [Vent Location](#) » [Screw Position](#) » [Drive Motor Start Up](#)



Drive motor start up
Vol.20 #2, July 1993


As a matter of policy, we strongly recommend a local electrician for large motor drive startup. His inspection and repair of any motor or control parts puts the responsibility at a local level where the operator has instant recourse.

It has been our experience that a large number of customers complain, for one reason or another, when we have our electrician make the repairs before shipment. We have never had a complaint when the customer had repairs and start up done locally, even though his electrician may not have the expertise that ours has.

See also:

- [Broken couplings](#)
- [Decreased motor amps](#)
- [DC drive failure](#)
- [High motor amps](#)
- [Motor overheating](#)
- [Start up efficiency](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .