



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division Board of Directors



# Temperature Measurement 1

Modified on Sunday, 01 February 2015 06:11 PM by [mpieler](#) Categorized as [Extrusion Hints](#) (10) » [Gear Pump Wear](#) » [How to Stop a Vacuum Pump](#) » [Temperature Measurement 1](#)



Temperature Measurement 1  
Vol.20 #2, July 1993

To get true temperature readings of barrel, check and clean out thermocouple well before reinserting the thermocouple.

Also make sure spring tension is adjusted properly to have good metal to metal contact.

See also:

- [Melt temperature](#)
- [Seated TCs](#)
- [Temperature measurement 2](#)
- [Thermocouple connections 1](#)
- [Thermocouple connections 2](#)
- [Troubleshooting with barrel zones](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#)