



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration


- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Overfilled Gearbox

Modified on Sunday, 01 February 2015 10:11 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

(10) » [Coextrusion Control](#) » [Cold Gearbox Oil](#) » **Overfilled Gearbox**

Overfilled gearbox
Vol.20 #3, Dec. 1993


If the oil level in your extruder gearbox is too high, excessive oil can be thrown into the high speed gear mesh.

This can increase the bearing loads and, in extreme cases, increase the noise level from the gearbox.

See also:

- [Cold gearbox oil](#)
- [Gear box oil](#)
- [Gearbox oil level](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .