



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Screw Installation 2

Modified on Sunday, 01 February 2015 11:04 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

[\(10\)](#) » [Heat Transfer](#) » [Adapter Flow](#) » **[Screw Installation 2](#)**

Screw Installation 2
Vol. 22 #2, Sept. 1995


When installing an extruder screw, it is good practice to apply one of the antiseize lubricating compounds to the screw shank and key areas.

This can make future screw removal easier by preventing rust in these areas.

See also:

- [Anti seize compounds](#)
- [Lubricate screw shank](#)
- [New screw shank lubricant](#)
- [Reinstalling a screw](#)
- [Screw installation 1](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .