



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Gear Pump Assembly

Modified on Sunday, 01 February 2015 11:19 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 
(10) » [Brass Bolts on Flange Collar](#) » [Leaks](#) » [Gear Pump Assembly](#)

Gear pump assembly
Vol. 22 #3, Dec. 1995


When assembling an extrusion gear pump, be sure to use molycote or some other equivalent lubricant.

Since the pump will rely on this lubricant until sufficient polymer lubrication film is available, failure to do this could result in pump failure due to a loss of lubrication.

See also:

- [Gear box oil](#)
- [Gear pump changes](#)
- [Gear pump lubrication](#)
- [Gear pumps](#)
- [Inconsistent gear pump output](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .