



## Navigation



## Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

## Search the Wiki

  »

## Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

## Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

## Administration


- [Administration](#)
- [File Management](#)

## Brought to you by:

The SPE Extrusion Division  
Board of Directors



## Pressure Blips

Modified on Sunday, 01 February 2015 11:22 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

[\(10\)](#) » [Start Up Efficiency](#) » [Motor Overheating](#) » [Pressure Blips](#)

Pressure Blips  
Vol. 23 #1, May 1996


If pressure transducers and rupture discs are mounted in the barrel, they will experience a pressure peak each time that the flight passes by. This pressure peak can cause premature failure of these devices.

This problem can be minimized by undercutting the screw flight slightly where it wipes by these devices.

## See also:

- [Calibrate transducers](#)
- [Pressure transducer handling](#)
- [Pressure transducers 2](#)
- [Rupture disks](#)
- [Transducer accuracy](#)
- [Transducer removal](#)
- [Transducer calibration](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .