



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration


- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Power Factor

Modified on Sunday, 01 February 2015 11:33 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

(10) » [Screw Cleaning 2](#) » [Twin Screw Installation](#) » **Power Factor**

Power Factor
Vol. 23 #2, Oct. 1996


How is the power factor doing in your plant?

Some of the new SCR based power controllers are set to come on at the same time and go off at various times based on the load required. A random start time could even the electrical load requirement and allow your transformers to operate more efficiently.

See also:

- [Corona treater power](#)
- [DC drive failure](#)
- [Thermocouple connections 1](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .