



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Unmelt Gels

Modified on Sunday, 01 February 2015 11:37 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

[\(10\)](#) » [Removing Gels](#) » [Training](#) » **Unmelt Gels**

Unmelt Gels
Vol. 23 #2, Oct. 1996


When unmelt gels are present, try lowering the feed zone temperature control.

Early melting in the solid bed can cause solid bed breakup and formation of nonhomogeneous melt which produces unmelt gels.

See also:

- [Gel identification](#)
- [Reversed temperature profile 1](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .