



## Navigation



## Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

## Search the Wiki

  »

## Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

## Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

## Administration

- [Administration](#)
- [File Management](#)

## Brought to you by:

The SPE Extrusion Division  
Board of Directors



# Gear Pump Lubrication

Modified on Sunday, 01 February 2015 11:50 PM by [mpieler](#) Categorized as [Extrusion Hints](#)   
(10) » [Decreased Motor Amps](#) » [New Extrusion Setup](#) » [Gear Pump Lubrication](#)

Gear pump lubrication  
Vol. 23 #3, Dec. 1996


When assembling a gear pump after inspection or service, be sure to thoroughly coat the internal parts with a molycote type lubricant, to provide lubrication to the internal parts during startup, before the plastic melt enters the pump.

- Dan Smith

See also:

- [Gear pump assembly](#)
- [Gear box oil](#)
- [Gear pump changes](#)
- [Gear pumps](#)
- [Inconsistent gear pump output](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .