



## Navigation



### Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

### Search the Wiki

 »

### Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

### Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

### Administration

- [Administration](#)
- [File Management](#)

### Brought to you by:

The SPE Extrusion Division Board of Directors



# Safety

Modified on Sunday, 01 February 2015 11:40 PM by [mpieler](#) Categorized as [Extrusion Hints](#) (10) » [New Extrusion Setup](#) » [Gear Pump Lubrication](#) » [Safety](#)

## Safety

Vol. 23 #3, Dec. 1996

Cover the end of the extruder when starting up a liquid injection process.

- Paul Andersen

### See also:

- [Flex tube safety](#)
- [For safety's sake 1](#)
- [Hoppers](#)
- [Hose clamp safety](#)
- [Razor knives](#)
- [Safety 2](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#)