



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration


- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Vents 2

Modified on Sunday, 01 February 2015 11:49 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

(10) » [Gear Pump Lubrication](#) » [Safety](#) » **Vents 2**

Vents 2

Vol. 23 #3, Dec. 1996

Vents, vacuum or atmospheric, are very important to achieve polymer material properties, and must be kept in good condition, clean and free of pluggage, in order to work properly.


Check ports and/or vacuum gauges for clear flow and piping for leaks.

- Bill Corcoran

See also:

- [Vent bleed](#)
- [Vent design](#)
- [Vent flow](#)
- [Vent insert design](#)
- [Vent openings](#)
- [Vent plugging](#)
- [Vents 1](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .