



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration


- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Extra Breaker Plates

Modified on Sunday, 01 February 2015 11:55 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

[\(10\)](#) » [Vent Flow](#) » [DC Drive Failure](#) » [Extra Breaker Plates](#)

Extra breaker plates
Vol. 24 #1, March 1997


To get dies and/or screens changed faster, without the delay of cleaning the breaker plates, have an extra available, and heated, before you open the equipment.

- Ken Powell, Becton Dickinson Research Center

See also:

- [Assembling screen packs](#)
- [Screen changing with a continuous screen changer](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .