



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration


- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Suction Pressure

Modified on Monday, 02 February 2015 12:17 AM by [mpieler](#) Categorized as [Extrusion Hints](#) 
(10) » [Die and Screw Cleaning](#) » [Semi-Works Operations](#) » [Suction Pressure](#)

Suction Pressure
Vol. 24 #2, Sept. 1997


When using an extrusion gear pump where pump suction pressure is higher than discharge, a regenerative drive system must be used to prevent the extruder from hydraulically drawing the pump and compromising the metering accuracy.

- Dan Smith, LCI Corp.

See also:

- [Gear pump changes](#)
- [Gear pump lubrication](#)
- [Gear pumps](#)
- [Inconsistent gear pump output](#)
- [Protect the pump](#)
- [Pump acceleration rate](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .