



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Heater Amps

Modified on Monday, 02 February 2015 12:22 AM by [mpieler](#) Categorized as [Extrusion Hints](#) 
(10) » [Protect the Barrel](#) » [Avoid Feed Stock Fluidization](#) » [Heater Amps](#)

Heater Amps
Vol. 24 #3, Dec. 1997


Apply a line marking each heater amp meter at the normal "full load" amp draw. Use this "normal" amp draw to identify heater band problems, i.e., half the normal amp load indicates half a heater band has failed.

- Paul Bowen, Quantum Chemical Co.

See also:

- [Decreased motor amps](#)
- [High motor amps](#)
- [Loose heaters](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .