



## Navigation



### Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

### Search the Wiki

  »

### Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

### Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

### Administration


- [Administration](#)
- [File Management](#)

### Brought to you by:

The SPE Extrusion Division Board of Directors



# Max RPM

Modified on Monday, 02 February 2015 12:27 AM by [mpieler](#) Categorized as [Extrusion Hints](#) 

[\(10\)](#) » [Feed Stock Supply](#) » [Monitor Back Pressure](#) » **Max RPM**

Max RPM  
Vol. 24 #3, Dec. 1997


If your extruder is running close to max rpm and you are not at max horsepower or torque limited, consider lowering field voltage on your DC motor to increase max rpm and output.

- John Wagner, Jr., Mobil Chemical

See also:

- [Extruder drives](#)
- [High motor amps](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .