



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division Board of Directors



Pressure Taps

Modified on Monday, 02 February 2015 12:26 PM by [mpieler](#) Categorized as [Extrusion Hints](#)

[\(10\)](#) » [Max RPM](#) » [Thrust Bearing](#) » **Pressure Taps**

Pressure Taps
Vol. 25 #1, May 1998

When designating or modifying an extruder, always install a pressure tap at the discharge end of all metering sections.

- Kun Sup Hyun, The Dow Chemical Co.

See also:

- [Pressure increases temperature](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#)