



## Navigation



## Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

## Search the Wiki

  »

## Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

## Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

## Administration

- [Administration](#)
- [File Management](#)

## Brought to you by:

The SPE Extrusion Division  
Board of Directors



# Dryer Inlet Air

Modified on Monday, 02 February 2015 12:46 PM by [mpieler](#) Categorized as [Extrusion Hints](#)   
(10) » [Twin Screw Extrusion 2](#) » [Installing a Dehumidifying Drying System](#) » **Dryer Inlet Air**

Dryer Inlet Air  
Vol. 25 #3, Dec. 1998

When predrying moisture sensitive hygroscopic resins, the drying temperature should be monitored and controlled at the air inlet of the drying hopper.


If the drying temperature is monitored and controlled at the air outlet of the dryer, the temperature loss across the hose connecting the dryer to the drying hopper may be as high as 30o F to 40o F, which will greatly retard the drying process.

- Pete Stoughton, Conair

See also:

- [Cool dryer return air](#)
- [Closed loop dryer](#)
- [Condensation](#)
- [Installing a dehumidifying drying system](#)
- [PET dryer](#)
- [PET dryer instrumentation](#)
- [Pre-drying moisture sensitive polymer](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .