



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  [»](#)

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Purge - Close Vent

Modified on Monday, 02 February 2015 01:17 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 
(10) » [Dehumidifying Dryers](#) » [Interactions](#) » [Purge - Close Vent](#)

Purge - Close Vent
Vol. 27 #2, November 2000


Many extrusion purges are required to "soak" in the barrel and downstream equipment. If the extruder is vented, remember to turn off the vacuum and keep the vent sealed closed.

- Mark Sewak, LCI Corp.

See also:

- [Purge 2](#)
- [Purge compound](#)
- [Purge material](#)
- [Purging](#)
- [Purging gels](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .