



## Navigation



## Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

## Search the Wiki

  [»](#)

## Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

## Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

## Administration

- [Administration](#)
- [File Management](#)

## Brought to you by:

The SPE Extrusion Division  
Board of Directors



## Twin Screw Extruder

Modified on Monday, 02 February 2015 01:17 PM by [mpieler](#) Categorized as [Extrusion Hints](#)   
(10) » [Document/Document/Document](#) » [Melt Pressure Indicator](#) » [Twin Screw Extruder](#)

Twin Screw Extruder  
Vol. 27 #2, November 2000


When assembling twin screw extruder elements on a shaft, lap them to remove burrs. This assures proper fit to minimize the possibility of polymer getting onto the shaft. The element should be lopped in a "figure 8" pattern, to keep the element faces "square".

- Paul Andersen, Krupp Werner & Pfleiderer Corp.

See also:

- [Lap stone](#)
- [Twin scale up](#)
- [Twin screw changes](#)
- [Twin screw extrusion](#)
- [Twin screw extrusion 2](#)
- [Twin screw extrusion \(3/99\)](#)
- [Twin screw help](#)
- [Twin screw installation](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .