



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division Board of Directors



Vent Flow 2

Modified on Monday, 02 February 2015 01:23 PM by [mpieler](#) Categorized as [Extrusion Hints](#) (10) » [Extruder Screw Won't Push Out](#) » [Die Pressure Variation](#) » **Vent Flow 2**



Vent Flow 2
Vol. 27 #3, December 2000


If extruder vent flow is troublesome, a melt pump may eliminate the problem by isolating much of the die pressure from the extruder.

- Dan Smith, Maag Pump systems Textron

See also:

- [Die pressure variation](#)
- [Vent flow](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .