



## Navigation



## Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

## Search the Wiki

  »

## Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

## Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

## Administration


- [Administration](#)
- [File Management](#)

## Brought to you by:

The SPE Extrusion Division  
Board of Directors



# Blender Problems

Modified on Thursday, 26 February 2015 03:39 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 


[\(10\)](#) » [Polymer Degradation](#) » [Lap Stone](#) » [Blender Problems](#)

Blender Problems  
Vol. 31 #2, Fall 2004

Quite often, processors think they are having problems with their blender, but the problem is really the loading system. Verify there are no leaks in your vacuum receivers and conveying lines, and the central system is set up properly.

– Keith Larson, ACS Group

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .